



## Assembly and Care instruction

**Please read these Assembly and Care Instructions completely, before starting to assemble the tent.**

### General instructions:

Carry out a trial assembly of the tent so that you are familiar with the important operations and instruction before actually using the tent.

We recommend that the assembly is carried out with the assistance of a second person, since many of the steps described can be carried out more easily and quickly in this way.

To assemble the tent, you will need a rubber or steel hammer, and also a tape measure, in order to mark out your pitch on the site and to differentiate between the tent poles.

### Accessories:

The fixing accessories provided are designed for normal weather conditions; heavy rain, storms, hail or snow will necessitate additional fixing accessories, such as guy-ropes for supporting the tent in stormy weather, and ground pegs and tent pegs for more stable attachment to the ground.

### Choosing a site:

Choose a level site wherever possible, free of stones and any sharp objects, in order to avoid damage to the tent fabric.

Remember that resin from trees and pollen from flowers can also damage the fabric of the tent, and avoid such locations wherever possible.

Pitch the tent so that the entrance is sheltered from the wind.

### Care:

If the tent is to be sited on damp ground, use a groundsheet in order to prevent the fabric from getting dirty. After use, the tent should always be packed away in a dry condition, or at least laid out to dry within 12 hours at the latest, in order to prevent the formation of mould. The poles should be cleaned of dirt after use, and stored separately from the tent skin.

Do not clean the tent using chemical cleaning agents or caustic materials. Simply allow the tent to dry and then brush the dirt out.

The plastic windows should be cleaned only with clean water and a soft cleaning cloth.

The zip fastenings will continue to operate smoothly if lubricated with a normal zip fastener spray or lightly rubbed periodically with candle-wax.

### IMPORTANT PRODUCT INFORMATION

Temperature variations and natural evaporation from the ground can lead to the formation of condensation. This effect is not due to lack of sealing integrity, and can be minimised by means of adequate ventilation or a airtight groundsheet.

Moist packed canvas can cause colour fading. Both characters are no reasons to complain. Be aware that the tent is well ventilated and dryly packed. Store the tent in a dry room. Separate the frame from the canvas.

### GENERAL:

Check the tent fixing regularly to avoid damages caused by wind. Use all possible tension possibilities to make sure that the tent is set up correct and save. Window flaps and doors should always be rolled up inward, so that water can run off and does not collect within the rolled-up fabric. Close doors and windows when wind becomes stronger that the wind cannot blow up your tent

Temperature variations may cause the fabric to shrink or expand slightly. These natural properties mean that the pitching of the tent should be checked regularly and adjusted when necessary.

Temperature variations and natural evaporation from the ground can lead to the formation of condensation. This effect is not due to lack of sealing integrity, and can be minimised by means of adequate ventilation or a airtight groundsheet.

### Fire precautions:

In order to camp safely, please follow these simple rules: Never place or use any cooking equipment or open lighting equipment close to the walls, roof or curtains of the tent, since the fabric is inflammable. Always observe the safety instructions relating to this equipment. Do not allow children to play in the immediate vicinity of such equipment when it is switched on. Always leave clear an exit route from the tent. Familiarise yourself with the fire safety equipment and precautions applicable on the camping site, or obtain these instructions from the site management.

### Service and Guarantee Card:

Our products are subject to the normal legal guarantee period. During this period, we will correct any faults which are due to material or manufacturing defects and which significantly affect the functionality or serviceability of the equipment. We reserve the right to repair or replace any faulty parts at our own discretion.

All further claims are excluded. The guarantee does not cover damage caused by failure to observe the Assembly and Usage Instructions or improper use, nor does it cover normal wear and tear, effects of the weather, or minor faults which do not significantly affect the functionality or serviceability of the equipment. The guarantee is invalid if the equipment has already been repaired or handled by third parties. *On presentation of proof of purchase, and taking into account the above exceptions, repairs will be carried out free of charge within the guarantee period exclusively by our Service Department. Any other pertaining agreements must be made in writing.*

Please visit us on our website:


[www.dwt-outdoor.com](http://www.dwt-outdoor.com)

There we offer you more specific information regarding each model.


Or write us an e-mail if you have an idea that you think we should have a closer look at.

Dieter Winneknecht GmbH  
Harzweg 11  
D-34225 Baunatal  
Germany  
[info@dwt-outdoor.com](mailto:info@dwt-outdoor.com)


1

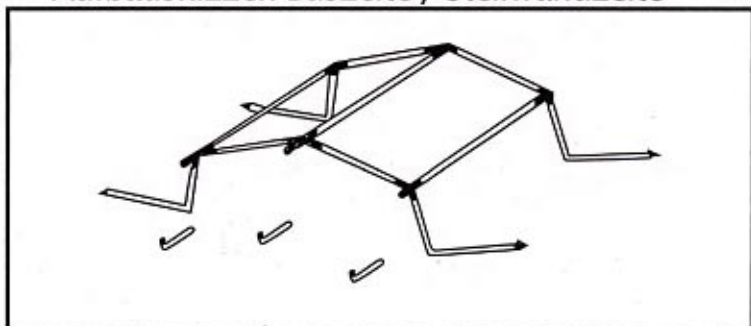

2

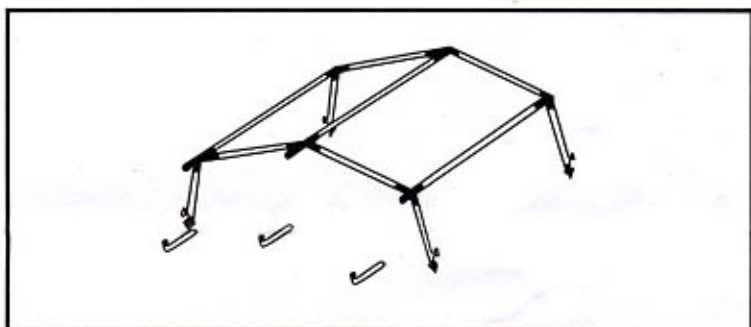

3

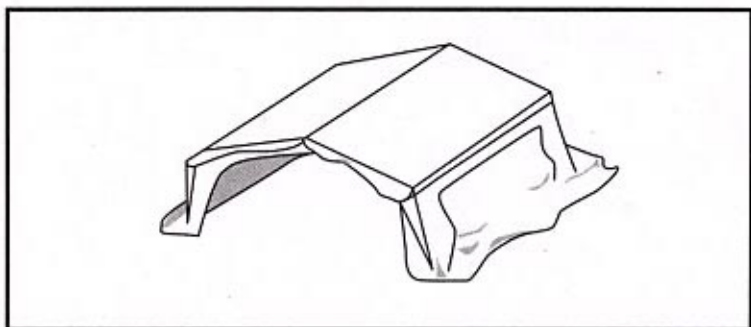

4

